What's in the Box



© 2023 SharkNinja Operating LLC. NINJA and NINJA STAYSHARP are registered trademarks in the United Kingdom of SharkNinja Operating LLC. K62006EUWH_QSG_MP_U8_230712_UK_MV1

Please make sure to read the enclosed Use and Care Guide prior to using.



Sharpening Guide

IMPORTANT: Knives arrive sharp. **DO NOT** sharpen immediately. **DO NOT** attempt to sharpen wet or unclean knives. To maintain optimal sharpness, follow the sharpening steps at least every 2 weeks.

TO SHARPEN:

- 1. Slide lever to bottom of knife block.
- 2. Insert clean Ninja knife into designated sharpening slot until the blade comes to a hard stop.



LARGE HANDLE Insert into upper sharpening slot (Chef and Slicing Knives)



SMALL HANDLE Insert into lower sharpening slot (Utility and Paring Knives)

3. While lightly holding the inserted knife, slide the lever all the way up and down 10 times. A slight click will be heard when the lever travels all the way to the top and bottom of the block.



- 4. Ensure the lever is at the bottom of the block. Push down and hold the release button while carefully removing the knife
- 5. Rinse and dry knife thoroughly after sharpening to remove metal shavings. If knife has not been returned to preferred sharpness, repeat steps above.

Sharpener Tips & Tricks



*StaySharp In-Block Sharpener designed for Ninja Knives only. Using other branded knives could damage both your sharpener and knives.

Recommended Knife Usage



qr.ninjakitchen.com/

staysharp