



BLACK+
DECKER

TM

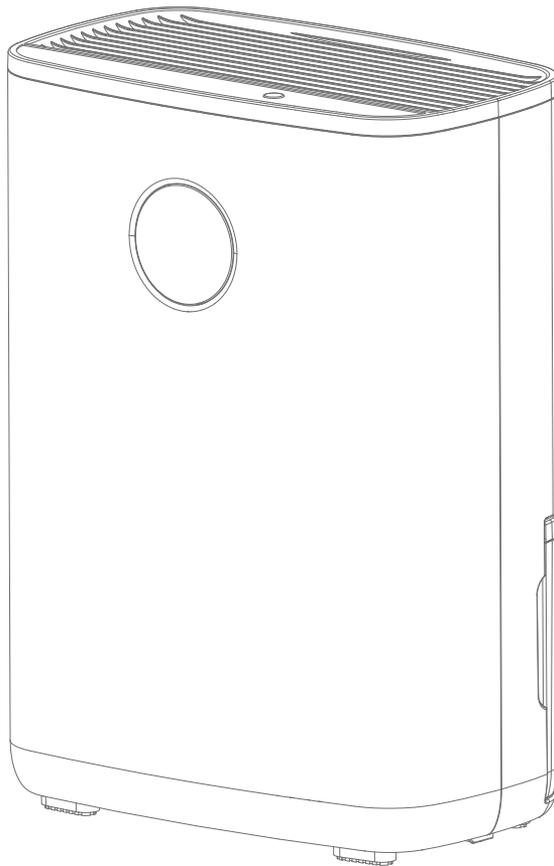

www.blackanddecker.co.uk

BXEH60002GB

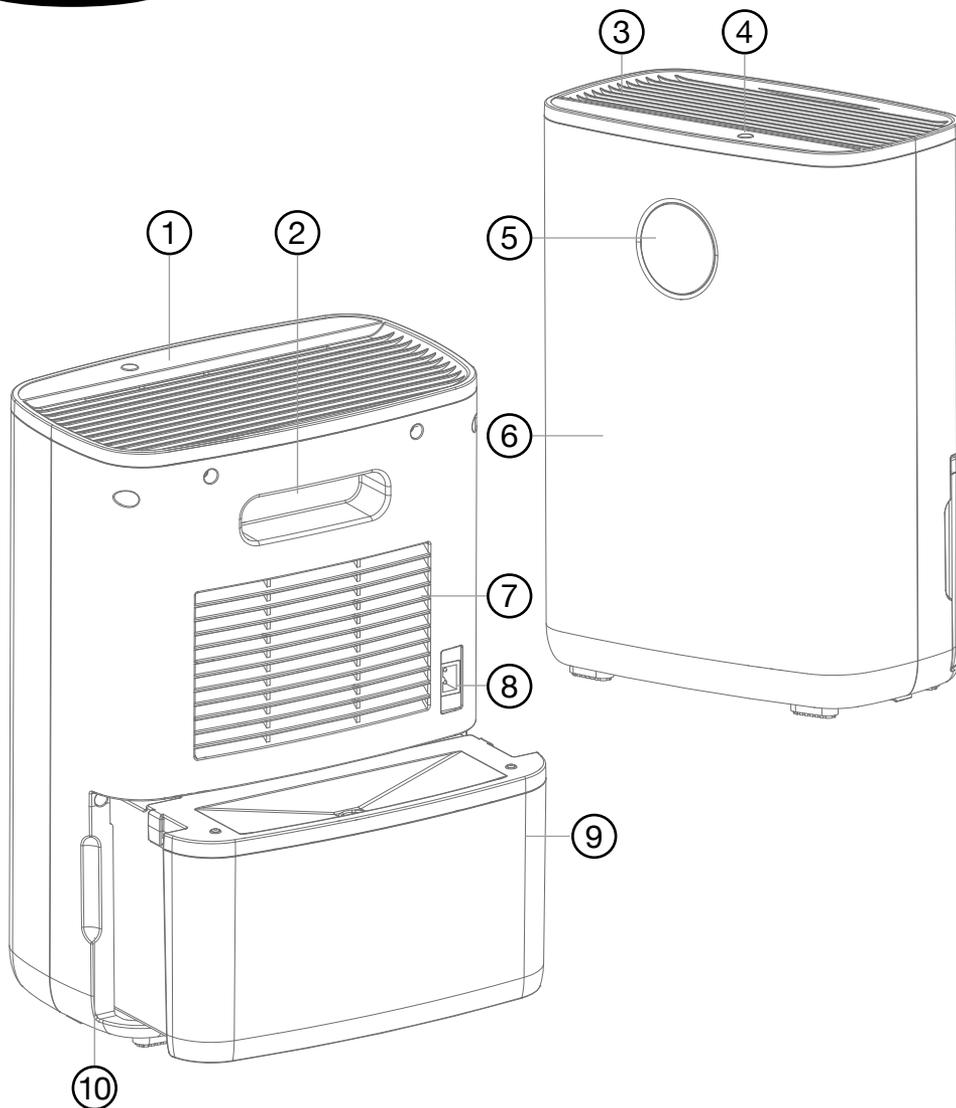

What's in the box

- Instruction Manual
- Dehumidifier/Air Purifier
- Power Adapter

Features

- | | |
|---------------------------|------------------------|
| 1. Top Cover | 6. Front Housing |
| 2. Unit Handle | 7. Air Inlet |
| 3. Air Outlet | 8. Power Socket |
| 4. ON/OFF Button | 9. Water Tank |
| 5. Digital Display Screen | 10. Water Tank Handles |

Intended Use

Your BLACK+DECKER BXEH60002GB 2L Dehumidifier has been designed for small and medium spaces.

This appliance is intended for indoor household use only.

Thank you for choosing BLACK+DECKER. We hope that you will enjoy using this product for many years.

Safety Instructions

▲WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions listed below may result in electric shock, fire and/or serious injury.

- ◆ Read this manual carefully before using the appliance.
- ◆ The intended use is described in this manual.
- ◆ The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.
- ◆ Retain this manual for future reference.
- ◆ **▲WARNING:** When using mains-powered appliances, basic safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock, personal injury and material damage.

Using Your Appliance

Please read the operating instructions carefully before using your appliance for the first time.

- ◆ Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- ◆ Children shall not play with the appliance.
- ◆ Do not let the cable hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- ◆ The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- ◆ Do not pull the plug out by the cable as this may damage the plug and/or the cable.
- ◆ Do not use this product for anything other than its intended use.
- ◆ This appliance is for household use only.
- ◆ Do not carry the appliance by the power cable.
- ◆ Do not use the appliance outdoors.
- ◆ Do not operate with wet hands.
- ◆ Use of an extension cable with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cable, appliance or plug point. Do not place the extension cable in a

position where it can be pulled on by children or animals or tripped over.

- ◆ Always unplug the unit when not in use or before cleaning.
- ◆ The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.

Safety Of Others

- ◆ Close supervision is necessary when any appliance is used by or near children.
- ◆ Children should not play with the appliance.
- ◆ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- ◆ Cleaning and user maintenance should not be undertaken by children without supervision.
- ◆ Take care when any appliance is used near pets.
- ◆ Do not allow the cord to become twisted.

After Use

- ◆ While cleaning, DO NOT use a wet cloth or use water on any part of the unit, as this may cause a short circuit or electrical shock.
- ◆ Keep this unit clean. Do not allow objects to enter the ventilation opening as this may cause electric shock, or damage to the unit. Switch off the unit and then remove the plug from the socket when not in use or before cleaning.
- ◆ Check all inlets and outlets regularly for accumulated dust.
- ◆ Disconnect the unit from mains outlet when it is not in use, or before relocating or cleaning it.
- ◆ Switch off and remove the plug from the socket before leaving the appliance unattended and before changing, cleaning or inspecting any parts of the appliance.
- ◆ When not in use, the appliance should be stored in a dry place. Children should not have access to stored appliances.

Inspections And Repairs

- ◆ Do not attempt to dismantle, repair or remould any part of the unit. This should only be done by a qualified service agent. Even the change of power cable should be done by a qualified person.

- ◆ In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the manufacturer.
- ◆ In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned precautions and instructions, could affect the safe operation of this product.

Additional safety instructions for Dehumidifiers

- ◆ Install the unit on flat and hard floor to diminish vibration or noise.
- ◆ Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- ◆ Ensure that the unit is switched off after use.
- ◆ Do not immerse cables, plugs or any part of the appliance in water or any other liquid.
- ◆ Operate the unit only at the voltage specified.
- ◆ Do not use the unit near open windows, as contact with rain and other natural elements could cause an electrical hazard
- ◆ Do not put heavy objects on the appliance.
- ◆ Do not tip the unit on its side.

- ◆ Never insert any other object into the unit body to avoid any hazard or unit failure.
 - ◆ Do not put the unit close to heat-generating devices or near flammable and dangerous materials.
 - ◆ If the supply cable is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard
 - ◆ The appliance must be positioned so that the plug is accessible.
- ⚠WARNING:** Do not place the unit on or near a hot gas electric burner.

Electrical safety

Before use, check that the mains voltage corresponds to the voltage on the rating plate.



This product must be earthed. Always check that the mains voltage corresponds to the voltage on the rating plate.

- ◆ Appliance plugs must match the outlet. Never modify the plug in any way.
- ◆ Do not use any adapter plugs with earthed (Class 1) appliances. Unmodified plugs and matching outlets will reduce the risk of electric shock.
- ◆ To avoid the risk of electric shock, do not immerse the cord, plug or appliance in water or other liquid.

Extension cables & class 1 product

- ◆ A 3 core cable must be used as your tool is earthed and of class 1 construction.
- ◆ Up to 30m (100 ft) can be used without loss of power.
- ◆ If the supply cord is damaged, it must be replaced by the manufacturer or an authorised BLACK+DECKER Service Centre in order to avoid a hazard.

Labels on Appliance

The following pictograms along with the date code are shown on the appliance:

▲WARNING: Before assembling, switch the appliance off and remove the plug from the socket.

Features

1. Top Cover
2. Unit Handle
3. Air Outlet
4. ON/OFF Button
5. Digital Display Screen
6. Front Housing
7. Air Inlet
8. Power Socket
9. Water Tank
10. Water Tank Handles

Use

About the Controls

- ◆ Defrost mode
- ◆ Ioniser function
- ◆ Removable water tank

Turning the Unit On or Off

Note: To avoid damage, place the unit in an upright position for at least 24 hours before first use

Note: Always ensure the water tank is empty and in position before turning the unit on.

Note: During the operation, keep doors and windows closed to save energy.

- ◆ Insert the DC end of the power adapter into the appliance. Insert the AC plug into the mains socket.
- ◆ Once switched on at the socket a sound prompt will be audible, indicating that the appliance is in stand-by mode.
- ◆ Press the ON/OFF key to start the unit. The display window will illuminate, and the unit will start to operate, with corresponding indicator lights displayed.
- ◆ Press the ON/OFF key again, the digital display screen and icons will go off and all functions of the machine will stop working. A sound prompt will be audible.

CAUTION: Turn the unit off, unplug and empty the water tank before moving it.


CAUTION: DO NOT move the unit whilst it is operating.

Note: DO NOT plug in/ unplug the machine to switch it on and off. Use the ON/OFF key on the unit first, then plug in/unplug.

Note: To extend the life of the appliance do not switch the machine on and off frequently.

Note: During the operation, keep doors and windows closed to save energy and improve the efficiency of the unit.

Control Panel

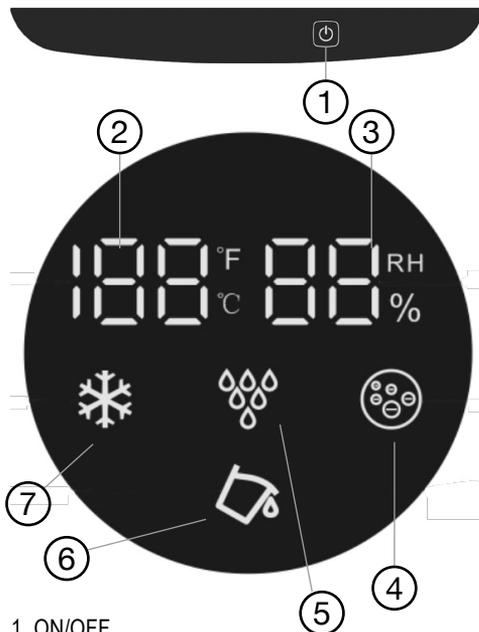

1. ON/OFF
2. Temperature Display
3. Humidity Display
4. Ionizer Icon
5. Dehumidifying Icon
6. Tank full Icon
7. Defrosting Icon

Temperature Display

18.8: The current environment temperature is displayed.

Humidity Display

88: The current environment humidity is displayed.

Ionizer Icon

- ◆ When the ionizer icon is illuminated the ionizer function of the unit is working.
- ◆ To activate the function, when the machine is ON, press and hold the "ON/OFF" button for 3 seconds.
- ◆ To deactivate the function press and hold the "ON/OFF" button again for 3 seconds.

Dehumidifying Icon

- ◆ When the dehumidifying icon is illuminated the unit is operating normally. If the icon light is not illuminated the dehumidifying function is not operating.

Tank Full Icon

- ◆ When the unit detects that the water tank has been full for 4 seconds the unit will stop dehumidification. The tank full icon will illuminate and an alarm will sound. The fan will continue to run for 3 minutes.
- ◆ When the unit stops pour the water out of the water tank (see section Removing the Water Tank) then replace the tank in to position. Once the tank is back in position the machine will start working again automatically.

Note: If the tank float sensor is not correctly positioned or has fallen off, the tank full indicator light will illuminate. Check the sensor and reposition as required.

Note: If the water tank is not correctly positioned the machine will not operate. The tank full indicator light will remain illuminated.


Defrosting Icon

- ◆ When the defrosting icon is illuminated the machine is performing its defrosting function. Once defrosting has finished the unit will revert back to the function it was performing before defrosting.

Note: The unit can defrost automatically.

Removing the water tank


- ◆ Remove the water tank by holding the handles at both sides of the water tank and pull out gently. Take care not to tilt the water tank during removal, to avoid water spillage.
- ◆ Empty the water, ensuring there is no water in the float.

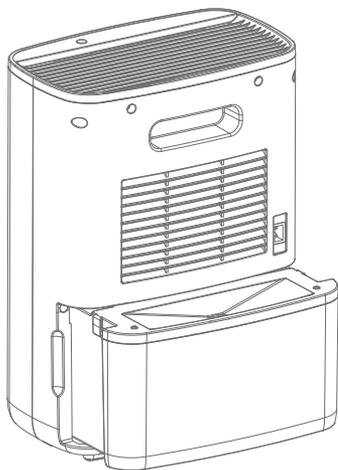

⚠WARNING: DO NOT drink the water from the water tank or give it to animals.

Note: If the water tank is removed during normal operation the unit will stop work automatically. Once the water tank is returned back to its position the unit will restart automatically.

Note: DO NOT remove the float from the water tank. The float is required for the water tank full sensor to gauge the water level. If the float is removed the unit will not stop when the water tank is full.

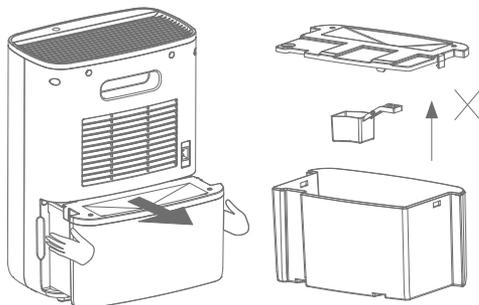

Cleaning and maintenance

⚠WARNING: Before cleaning and maintenance, switch the appliance off and remove the plug from the socket, to prevent electric shock.

- ◆ Do not immerse any part of the appliance, power cord or plug in liquids..
- ◆ Use a soft damp cloth to wipe the surface. Avoid using detergent, spray or chemicals as these may cause damage to the appliance.
- ◆ Use only implements recommended by the manufacturer for defrosting or cleaning.
- ◆ Clean the water tank with soft cloth.
- ◆ Clean the water from inside the float. DO NOT take the float assembly apart.
- ◆ Unplug the dehumidifier if it is not to be used for a long time.
- ◆ Store the appliance in a cool, dry place, ideally in its original packaging.

Mains plug replacement

If a new mains plug needs to be fitted:

- ◆ Safely dispose of the old plug.
- ◆ Connect the brown lead to the live terminal in the new plug.
- ◆ Connect the blue lead to the neutral terminal.
- ◆ If the product is class I (earthed), connect the green/yellow lead to the earth terminal.

Note! If your product is class II double insulated (only 2 wires in the cord set), no connection is to be made to the earth terminal.

Follow the fitting instructions supplied with good quality plugs. Any replacement fuse must be of the same rating as the original fuse supplied with the product.

⚠WARNING: The above section on mains plug replacement is for authorized service centre persons.

Protecting the environment



Separate collection. Products and batteries marked with this symbol must not be disposed of with normal household waste.

Products and batteries contain materials that can be recovered or recycled, reducing demand for raw materials. Please recycle electrical products and batteries according to local provisions. Further information is available at www.2helpU.com.

Technical data

		BXEH60002GB
Input voltage	V AC	220 - 240
Frequency	Hz	50/60
Power input	W	65
Noise	dB (A)	45
Weight	KG	2.2
Extraction	ML/Day	500
Water tank	Litres	2
Size	L x W x H (mm)	142 x 240 x 342

Product Guarantee

This product comes with a 2 Year guarantee from the original date of purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer. This guarantee is in addition to and in no way prejudices your statutory rights.

The Following Conditions Apply:

- ◆ The product must be returned to the retailer with proof of purchase or a receipt within the 1st year of purchase. For any product related issues after 12 months please contact our customer services team.
- ◆ The product must be installed and used in accordance with the instructions contained in this instruction guide.
- ◆ It must be used only for domestic purposes.
- ◆ It does not cover wear and tear, damage, misuse or consumable parts.
- ◆ This guarantee is valid in the UK and Republic of Ireland.

For all customer service enquires please contact us below;

RKW,
Sutton House,
Berry Hill Road,
Stoke-on-Trent,
ST4 2NL
Email blackanddecker@rkwltd.com
Tel 0333 220 6089

Black & Decker® and BLACK+DECKER™ and the Black & Decker® and BLACK+DECKER™ logos are registered trademarks of The Black & Decker® Corporation and are used under licence. All rights reserved. Imported and Distributed by RKW LTD, Sutton House, Berry Hill Industrial Estate, Berry Hill Road, Stoke-on-Trent, ST4 2NL



ENGLISH

(Original instructions)



(Original instructions)

ENGLISH



